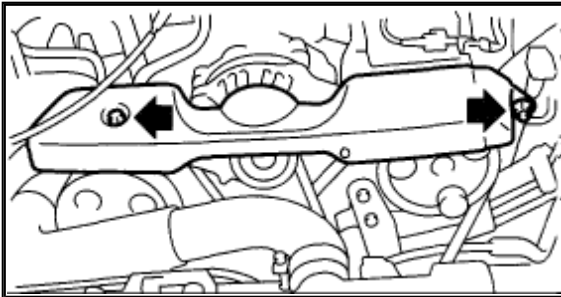



REMOVAL

1. FRONT SIDE BELT

NOTE: Perform the following procedures 1 to 4 with the engine installed to the body.

[Zoom](#)[Sized for Print](#)


1. Remove the V-belt cover.

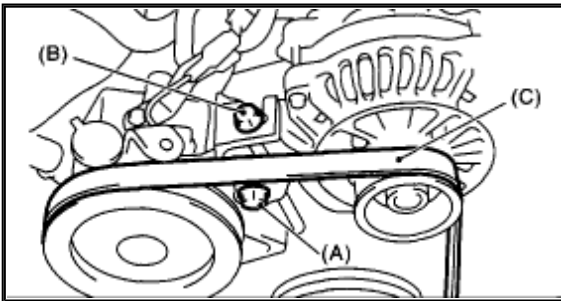[Zoom](#)[Sized for Print](#)


2. Loosen the lock bolt (A).
3. Loosen the slider bolt (B).
4. Remove the front side belt (C).

2. REAR SIDE BELT

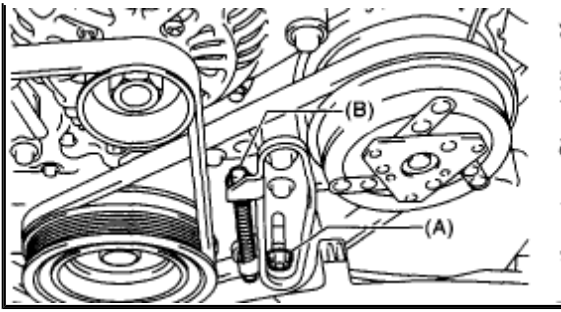

[Zoom](#)[Sized for Print](#)

1. Loosen the lock nut (A).
2. Loosen the slider bolt (B).
3. Remove the A/C belt.

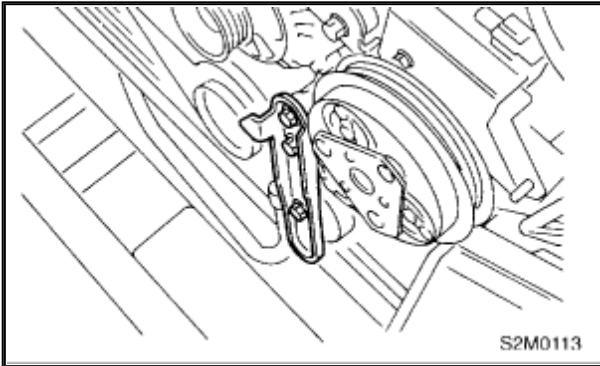[Zoom](#)[Sized for Print](#)

4. Remove the A/C belt tensioner.